



TITAN REMOTE CONTROL

- Press **POWER** once to turn on or off selected devices.
- Use **SETUP** for all programming sequences.
- Press **AUD**, **DVD**, **AUD**, **TV**, or **STB** to select a device to control.
- SKIP BACK** instantly replays the last 7 seconds of your program.
- Press **LIVE** to return to watching LIVE TV.
- These keys to control playback on your DVD player or DVR.
- GUIDE** displays the program guide. **MENU** displays the options menu. **INFO** displays the current channel and program information. **EXIT** directly exits menus, guides, and applications.
- PAGE+/-** pages up (or down) menu screens and program guide.
- Arrow keys move the cursor and navigate the program guide.
- OK** & **ENTER** select PPV events, and select programs on the guide
- CH+/-** selects the next higher (or lower) channel.
- DAY+/-** moves a day forward (or back) on your program guide.
- VOL+/-** raises (or lower) the volume.
- FAV** cycles through your favorite channels.
- MUTE** turns sound off; press again to turn sound back on.
- Use the keypad numbers (1-9, and 0) to directly tune channels.

TO PROGRAM YOUR REMOTE

1. Turn the device (**TV**) on.
2. Press the device key you wish to program (AUD, DVD, AUD, TV or STB).
3. Press and hold the **SETUP** (LED blinks twice).
4. Press **9-9-1** (LED blinks twice).
5. Designate device: press **1** for **TV**, **2** for **DVD/VCR**, **3** or **AUD**.
6. Press the **POWER** key.
7. Press and release the **CH+** over and over slowly until the TV turns off. (Do Not press the CH+ again or you will advance the code).

8. When the device turns off, press **SETUP** (device button will blink twice). Your remote is now programmed.

TO TROUBLESHOOT

1. Press **CBL/STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.