 


# NTS Remotes

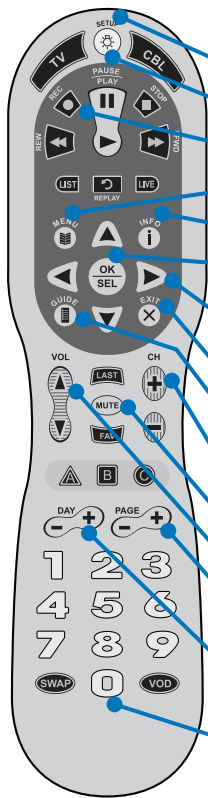

## POLARIS REMOTE CONTROL

- Use **SETUP** for all programming sequences.
- To turn on your television or set-top box, press **TV** or **CBL** once.
- Press **REC** twice to activate recording.
- MENU** displays your DTV screen menu.
- INFO** displays current channel and program information.
- Use **SELECT/OK** as **ENTER** for ordering PPV events, and to tune programs from the program guide.
- ARROW** keys move the cursor in the program guide and menu screens.
- Use **EXIT** to exit out of any menu or guide display.
- GUIDE** displays the program guide and other tabs with channel groupings (Subscribed, All, Favorites, HD and PPV).
- Use **CH+/-** to select the next higher (or lower) channel.
- MUTE** turns sound off or on.
- VOL +/-** raises (or lowers) the sound volume.
- PAGE +/-** moves up (or down) through menu screens and the program guide.
- DAY +/-** moves a day forward (or back) on your DTV program guide.
- Use the keypad (0-9) to directly select channels.

## TO PROGRAM YOUR REMOTE

1. Turn the device (**TV**) on.
2. Press **TV** button (blinks twice).
3. Press and hold the **SETUP** (TV LED blinks twice).
4. Press **9-9-1** (TV LED blinks twice again).
5. Press and release the **CH+** over and over slowly until the TV turns off. (Do Not press the CH+ again or you will advance the code).
6. When the device turns off, press **SETUP** (TV button will blink twice). Done.

## TO TROUBLESHOOT

1. Press **CBL** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.



## TITAN REMOTE CONTROL

- Press **POWER** once to turn on or off selected devices.
- Use **SETUP** for all programming sequences.
- Press **AUD**, **DVD**, **AUD, TV**, or **STB** to select a device to control.
- SKIP BACK** instantly replays the last 7 seconds of your program.
- Press **LIVE** to return to watching LIVE TV.
- These keys to control playback on your DVD player or DVR.
- GUIDE** displays the program guide. **MENU** displays the options menu. **INFO** displays the current channel and program information. **EXIT** directly exits menus, guides, and applications.
- PAGE +/-** pages up (or down) menu screens and program guide.
- Arrow keys move the cursor and navigate the program guide.
- OK & ENTER** select PPV events, and select programs on the guide.
- CH+/-** selects the next higher (or lower) channel.
- DAY +/-** moves a day forward (or back) on your program guide.
- VOL +/-** raises (or lower) the volume.
- FAV** cycles through your favorite channels.
- MUTE** turns sound off; press again to turn sound back on.
- Use the keypad numbers (1-9, and 0) to directly tune channels.

## TO PROGRAM YOUR REMOTE

1. Turn the device (**TV**) on.
2. Press the device key you wish to program (AUD, DVD, AUD, TV or STB).
3. Press and hold the **SETUP** (LED blinks twice).
4. Press **9-9-1** (LED blinks twice).
5. Designate device: press **1** for **TV**, **2** for **DVD/VCR**, **3** or **AUD**.
6. Press the **POWER** key.
7. Press and release the **CH+** over and over slowly until the TV turns off. (Do Not press the CH+ again or you will advance the code).
8. When the device turns off, press **SETUP** (device button will blink twice). Done.

## TO TROUBLESHOOT

1. Press **CBL/STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.

continued on back...

## ADB POTENZA REMOTE CONTROL



- Press **AUX, DVD, AUD, TV, or STB** to select a device to control.
- POWER** turns on or off the selected component.
- These keys to control playback on your DVD player or DVR.
- These keys to control playback on your DVD player or DVR.
- MENU** displays the settings menu. **INFO** displays current channel and program information.
- ARROW KEYS** move the cursor in the on-screen guides.
- OK** makes a selection or choose options on the program guide.
- GUIDE** displays the program guide. **EXIT** will exit out of the menu, guide or any function.
- PAGE +/-** scrolls through menu screens and the program guide. **DAY +/-** moves a day forward (or back) on your program guide.
- VOL +/-** raises (or lowers) the sound volume.
- CH +/-** select the next higher (or lower) channel or in the guide these buttons will allow you to page up and down.
- MUTE** button will shut off sound on the TV.
- LAST** recalls the last channel and will page back one screen in the main menu. Pushing Last again and again will let you go back and forth between the last two channels that were viewed.
- Use the **NUMBER KEY PAD (0-9)** to directly select channels.
- CLOSED CAPTION** is for turning the closed captioning on and off. However, this does depend on the TV, channel, and programming for availability.
- TV/VIDEO INPUT** switches the mode between TV or Video.


## TO PROGRAM YOUR REMOTE

1. Press and release the **TV** button.
2. Press and hold the **RCU SETUP** until the TV button blinks twice.
3. Enter in **9-9-1** and the **TV** button will blink twice.
4. Aim the remote at the TV and press and release the **POWER** button.
5. Press and release the **CH+** over and over slowly until the TV turns off. (Do Not press the CH+ again or you will advance the code).
6. Press the **POWER** button to turn the TV on. (If the TV did not turn on, press **CH-** once and try again.)
7. Press the **RCU SETUP** button to store the code for the TV. The **TV** button will blink twice. The remote is now ready to operate the TV.

## TO TROUBLESHOOT

1. Press **STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.

## ADB SILVER REMOTE CONTROL

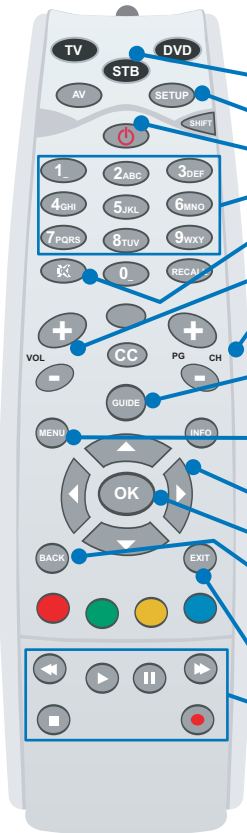

- Press **TV, DVD, or STB** to select a device to control.
- Use **SETUP** for all programming sequences.
- POWER** turns on or off the selected component.
- Use the **NUMBER KEY PAD (0-9)** to directly select channels.
- MUTE** button will shut off sound on the TV.
- VOL +/-** raises (or lowers) the sound volume.
- PG +/- or CH +/-** select the next higher (or lower) channel or in the guide these buttons will allow you to page up and down.
- GUIDE** displays the program guide. **EXIT** will exit out of the menu, guide or any function.
- MENU** displays the settings menu. **INFO** displays current channel and program information.
- ARROW KEYS** move the cursor in the on-screen guides.
- OK** makes a selection or choose options on the program guide.
- BACK** recalls the last channel and will page back one screen in the main menu. Pushing Last again and again will let you go back and forth between the last two channels that were viewed.
- EXIT** directly exits menus, guides, and applications.
- These keys to control playback on your DVD player or DVR.

## TO PROGRAM YOUR REMOTE

1. Make sure your TV is on.
2. Press the **TV** key on the remote.
3. Press and hold down **SHIFT** key until the red light blinks twice.
4. Press **9-9-1**. The red light will blink twice.
5. Aim the remote at your TV and press **CH+** over and over slowly until the TV turns off.
6. Once the TV shuts off, press **SHIFT** key to save the code.

## TO TROUBLESHOOT

1. Press **STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.



## ADB BLACK REMOTE CONTROL


- POWER** turns on or off the selected component. These keys to control playback on your DVD player or DVR.
- Press **TV**, **DVD**, **AUX**, or **STB** to select a device to control.
- These keys to control playback on your DVD player or DVR.
- MENU** displays the settings menu. **INFO** displays current channel and program information.
- ARROW KEYS** move the cursor in the on-screen guides.
- OK** makes a selection or choose options on the program guide.
- GUIDE** displays the program guide. **EXIT** will exit out of the menu, guide or any function.
- VOL+/-** raises (or lowers) the sound volume.
- CH+/-** select the next higher (or lower) channel or in the guide these buttons will allow you to page up and down.
- MUTE** button will shut off sound on the TV.
- Use the **NUMBER KEY PAD (0-9)** to directly select channels.

## TO PROGRAM YOUR REMOTE

1. Turn on all the devices you wish to control.
2. Press the mode key you want to program (**TV**, **DVD**, **AUX**, or **STB**).
3. Press and hold **SETUP** until the selected button blinks twice.
4. Enter **9-1-1**. The mode **LED** should blink twice.
5. Aim the remote control at the device and press **CH+** slowly until the device turns off.

## TO TROUBLESHOOT

1. Press **STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.

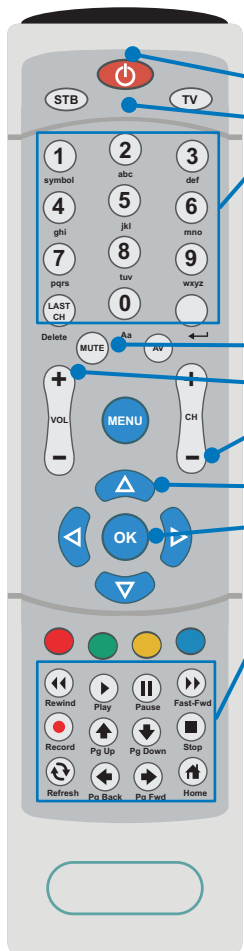

## AMINO SILVER REMOTE CONTROL

- POWER** turns on or off the selected component.
- Press **TV** or **STB** to select a device to control.
- Use the **NUMBER KEY PAD (0-9)** to directly select channels.
- MUTE** button will shut off sound on the TV.
- VOL+/-** raises (or lowers) the sound volume.
- CH+/-** select the next higher (or lower) channel or in the guide these buttons will allow you to page up and down.
- ARROW KEYS** move the cursor in the on-screen guides.
- OK** makes a selection or choose options on the program guide.
- These keys to control playback on your DVD player or DVR.

## TO PROGRAM YOUR REMOTE

1. Find the 3-digit code for your device in the Code List from the web link below. (<http://www.mintel.net/docs/Aminoremotecodes.pdf>)
2. Make sure your TV is on
3. Simultaneously press and hold the **TV** and **OK** buttons on the remote. The **TV** button will light.
4. Release the **TV** and **OK** buttons (the **TV** button remains illuminated.)
5. Now enter the 3-digit code for your TV
6. When the third digit has been entered, the **TV** button will go out and the remote is ready to operate your TV.

## TO TROUBLESHOOT

1. Press **STB** button.
2. Power cycle the set-top box.
3. Make sure there are no obstructions between the remote and set-top box.
4. Replace the remote's batteries.
5. Replace the remote.